


Quick Start WASHLET™ GL 2.0

TOTO

TCF6532C3GV1 / TCF6532G#NW1 / TCF6532GE#NW1 / TCF6532SW#NW1

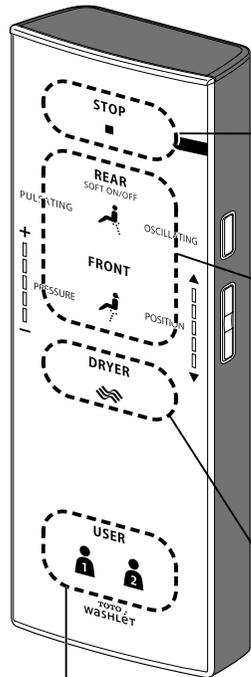

Stopping

- [STOP]**
Stops the operation.

Cleansing

- * **[REAR]**
Cleanses your rear.
- [SOFT]**
Washes your rear with mild water pressure.

*The mode changes between [SOFT] (Flickering) and [REAR] (Lit) each time the button is pressed.

- [FRONT]**
Serves as a bidet for ladies.

Drying


- [DRYER]**
Dries your rear.

Personal Setting

1 2 [USER1] / [USER2]
You can store your preferred wand position, water pressure and water temperature a setting.

- To store a setting
While cleansing is in progress, set your preferred wand position, water pressure, and warm water temperature, and then press and hold [USER 1] or [USER 2] for 2 seconds or longer.
- To use
Press [USER 1] or [USER 2], and then press the button for the cleansing you want to use.

*The wand position and water pressure lamps will light up for about 10 seconds in their set positions, and the water temperature display switches.

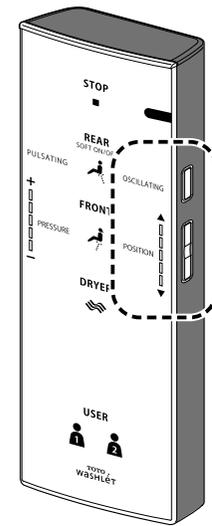


[OSCILLATING]

- The wand moves back and forth to wash your rear thoroughly.
- The setting changes between "ON" and "OFF" each time the button is pressed.

[POSITION]

- The wand position can be adjusted to the front or rear.
(▲: Moves to the front, ▼: Moves to the rear)

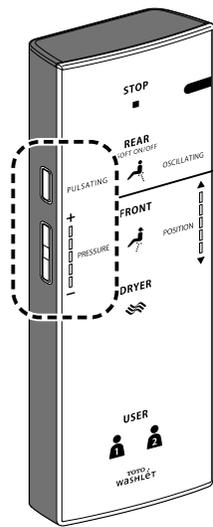

[PULSATING]

- Washes with the water pressure pulsating between soft and strong.
- The setting changes between "ON" and "OFF" each time the button is pressed.

[PRESSURE]

- The water pressure strength can be adjusted for cleansing functions such as REAR. ("·": Softer, "+": Stronger)

Note

●Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

For your information

- Water may sometimes come out from around the wand while water is warmed up or when it expands in the warm water tank.
- As warm water tank is used as hot water system, the temperature of warm water may become lower if it is continuously consumed.