

# Quick Start WASHLET™ RX EWATER+ / RX EWATER+ auto flush TOTO

TCF894CG / TCF895CG

### Stopping

- "Stopping"  
Stops the operation.

### Cleansing

- 🚿 "Rear cleansing"  
Cleanses your rear.
- 🚿 "Rear soft cleansing"  
Cleanses your rear with mild water pressure.
- The setting changes between 🚿 and 🚿 each time the 🚿 is pressed.
- 🚿 "Front cleansing"  
Serves as a bidet for ladies.
- 🚿 "Wand CLEAN"  
Cleans the wand with "ewater+".
- The wand can be automatically cleaned when you use the cleansing functions (Rear cleansing, Front cleansing, etc.).

### Personal setting lock

👤 👤 You can store your preferred "Wand position", "Water pressure" and "Warm water temperature" settings.

- To store a settings  
While cleansing is in progress, set your preferred "Wand position", "Water pressure" and "Warm water temperature" and then press and hold 👤 or 👤 for 2 seconds or longer.
- To use  
Press 👤 or 👤 and then press the button for the cleansing you want to use.
- The "Wand position" and "Water pressure" lamps will light up for about 10 seconds in their set positions, and the "Warm water temperature" display switches.

- Functions that operate when a button is pressed during "Rear cleansing", "Rear soft cleansing" or "Front cleansing".

Note

- Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

### "Oscillating cleansing"

The wand moves back and forth to cleanse your rear thoroughly.

### "Pulsating cleansing"

Cleanses with the water pressure pulsating between soft and strong.

- The setting changes between "ON" and "OFF" each time the button is pressed.

### "Water pressure adjustment"

You can adjust the water pressure to one of five levels. ([-] Softer, [+] Stronger)

- After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.
- A light will also flash for about 10 seconds to indicate the current setting when any of the cleansing buttons (rear cleansing, rear soft cleansing, front cleansing) are pressed.

### "Wand position adjustment"


You can adjust the washing position to 5 different points between the front and the rear, using the [▲] and [▼] buttons.

- After you press the "Wand position adjustment" button, the set position will light for 10 seconds.
- A light will also flash for about 10 seconds to indicate the current setting when any of the cleansing buttons (rear cleansing, rear soft cleansing, front cleansing) are pressed.



### Flushing\*2

- 🌀 "Full flush"  
Performs a full flush.
- 🌀 "Light flush"  
Performs a light flush.

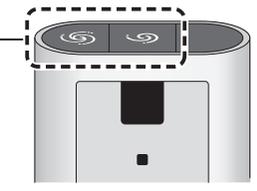

---

This section is an overview of the settings that can be configured with the remote control.

- See the corresponding pages for the detailed descriptions.

### Temperatures

Adjust temperatures

- 🌡️ "Toilet seat temperature"
- 💧 "Warm water temperature"


### Auto functions\*2

For changing Settings

- 🌀 "Auto flushing"

- 🔌 "Power ON/OFF"
- Pressing it about 3 seconds or longer turns the power on/off.

Remote control back side

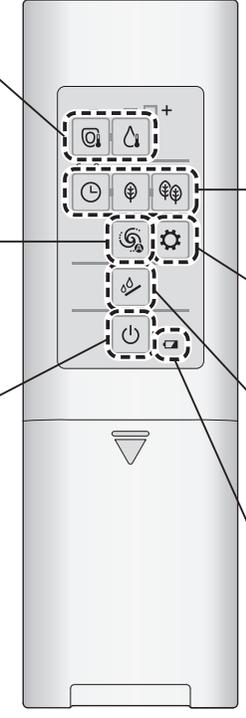

### Energy Saver

Saving energy

- 🕒 "Timer energy saver"
- 🌿 "Auto energy saver"
- 🌿 "Auto energy saver+"

### "Setting confirmation"

- The current setting can be discerned from the LEDs.

### "Wand cleaning"

- To clean the wand with it extended.
- When replacing the spray nozzle

 Low battery warning mark

\*1 Remote control transmitter (Front side, Top side)

\*2 Except TCF894CG and TCF896CG.