

Quick Start WASHLET™ SX EWATER+ / SX EWATER+ auto flush TOTO

TCF896CG / TCF897CG

Stopping

- "Stopping"
Stops the operation.

Cleansing

- 🚿 "Rear cleansing"
Cleanses your rear.
- 🚿 "Rear soft cleansing"
Cleanses your rear with mild water pressure.
- The setting changes between 🚿 and 🚿 each time the 🚿 is pressed.
- 🚿 "Front cleansing"
Serves as a bidet for ladies.
- 🚿 "Wand CLEAN"
Cleans the wand with "ewater+".
- The wand can be automatically cleaned when you use the cleansing functions (Rear cleansing, Front cleansing, etc.).

Personal setting lock

👤 👤 You can store your preferred "Wand position", "Water pressure" and "Warm water temperature" settings.

- To store a settings
While cleansing is in progress, set your preferred "Wand position", "Water pressure" and "Warm water temperature" and then press and hold 👤 or 👤 for 2 seconds or longer.
- To use
Press 👤 or 👤 and then press the button for the cleansing you want to use.
- The "Wand position" and "Water pressure" lamps will light up for about 10 seconds in their set positions, and the "Warm water temperature" display switches.

- Functions that operate when a button is pressed during "Rear cleansing", "Rear soft cleansing" or "Front cleansing".

Note

- Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

"Oscillating cleansing"

The wand moves back and forth to cleanse your rear thoroughly.

"Pulsating cleansing"

Cleanses with the water pressure pulsating between soft and strong.

- The setting changes between "ON" and "OFF" each time the button is pressed.

"Water pressure adjustment"

- +

□ □ □ □ □

You can adjust the water pressure to one of five levels. ([-] Softer, [+] Stronger)

- After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.
- A light will also flash for about 10 seconds to indicate the current setting when any of the cleansing buttons (rear cleansing, rear soft cleansing, front cleansing) are pressed.


"Wand position adjustment"

□ □ □ □ □

▲ ▼


You can adjust the washing position to 5 different points between the front and the rear, using the [▲] and [▼] buttons.

- After you press the "Wand position adjustment" button, the set position will light for 10 seconds.
- A light will also flash for about 10 seconds to indicate the current setting when any of the cleansing buttons (rear cleansing, rear soft cleansing, front cleansing) are pressed.



Flushing^{*2}

- 🌀 "Full flush"
Performs a full flush.
- 🌀 "Light flush"
Performs a light flush.

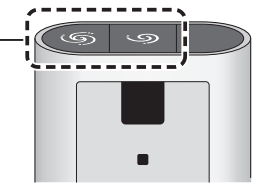

This section is an overview of the settings that can be configured with the remote control.

- See the corresponding pages for the detailed descriptions.

Temperatures

Adjust temperatures


- 🌡️ "Toilet seat temperature"
- 💧 "Warm water temperature"

Auto functions^{*2}

For changing Settings

- 🌀 "Auto flushing"

- 🔌 "Power ON/OFF"
- Pressing it about 3 seconds or longer turns the power on/off.

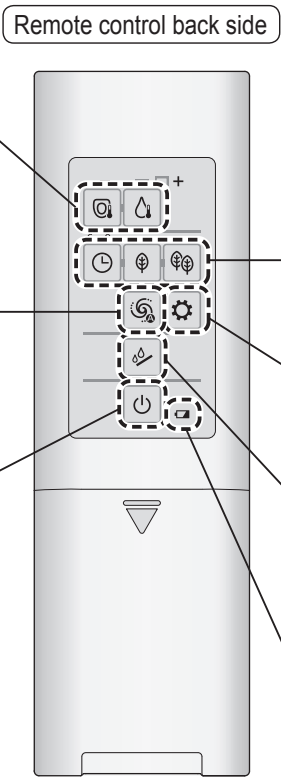

Remote control back side

Energy Saver

Saving energy


- 🕒 "Timer energy saver"
- 🌿 "Auto energy saver"
- 🌿 "Auto energy saver+"

"Setting confirmation"

- The current setting can be discerned from the LEDs.

"Wand cleaning"

- To clean the wand with it extended.
- When replacing the spray nozzle

 Low battery warning mark

*1 Remote control transmitter (Front side, Top side)

*2 Except TCF894CG and TCF896CG.